

# HANGING YOUR NEW VENETIAN BLIND

Your new Venetian Blind has been made up to your measurements and tested before leaving our factory.

To Install your blind you will need:

Drill, Tape measure and Screwdriver

1½" No. 6 screws for plaster/concrete fixing

¾" No. 6 screws for timber fixing

Rawl plugs if required

**CAUTION: USE PROPER EYE PROTECTION WHEN DRILLING MOUNTING HOLES.**

**NOTE: WIDE BLINDS MAY REQUIRE MORE THAN ONE PERSON TO INSTALL.**

Ensure the fixing surface is firm and level. Choose the position of your blind allowing space front and back to prevent window catches etc. Hindering the movement of your blind.

Carefully remove blind from packaging, being aware not to damage blind if cutting open packaging with a knife or scissors.

Unless otherwise specified you will have been supplied with the correct number of Swivel Brackets (see figure 1), for the width of your blind. A bracket should be placed approximately 75mm (3") in from each end of the headrail and the remainder spread in between no more than 800mm (31") apart.


For blinds exceeding 4 square metres, or Woodslat Venetian Blinds an additional bracket either side or the cord lock is recommended to give extra strength.

**IMPORTANT: BRACKETS MUST NOT INTERFERE WITH THE MOVEMENT OF COMPONENTS INSIDE THE HEADRAIL, THIS SHOULD BE CONSIDERED WHEN PLACING BRACKETS.**

Ensure the swivel section of the brackets are in the open position (see figure 2), offer up the headrail and lock swivels (see figures 3 and 4).


You have now successfully installed your blind, before operating your blind please read the following instructions on Using Your New Venetian Blind.

Figure 1

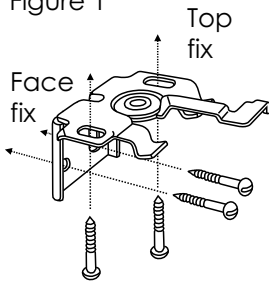


Swivel Bracket

Figure 2

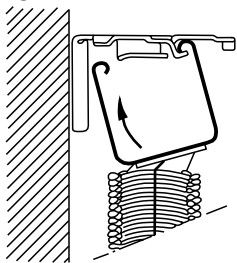


Locating Headrail  
in Brackets

Figure 3

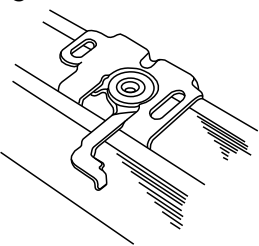

Open Brackets Before  
Inserting Headrail


Figure 4

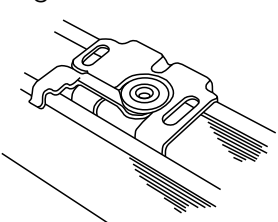

Swivel Brackets to  
Closed position to  
Lock Headrail in Place


# USING YOUR NEW VENETIAN BLIND

Your Venetian Blind will give you many years trouble free service so long as it is correctly installed and operated. By following these simple instructions you can be confident you are operating your blind correctly and safely.

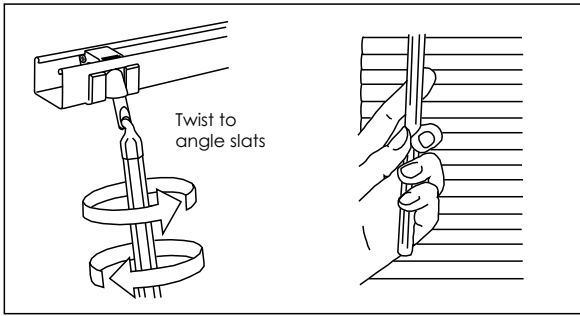

**Wand Tilt Operation:** By twisting the clear wand in either direction the angle of slatting can be adjusted to match the angle of the sun (see diagram above). Care should be taken not to over-twist the clear wand as this can cause it to unhook from the blind. Should this happen the hook end can be easily clipped back into place. It is also recommended that the wand is not bent tightly as this may leave it permanently curved.


**Cord Tilt:** Using both hands (see diagram right), gently pull either cord. If the slats do not tilt in the desired direction, gently pull other cord. (Please read the safety instructions below on keeping cords out of reach of children).

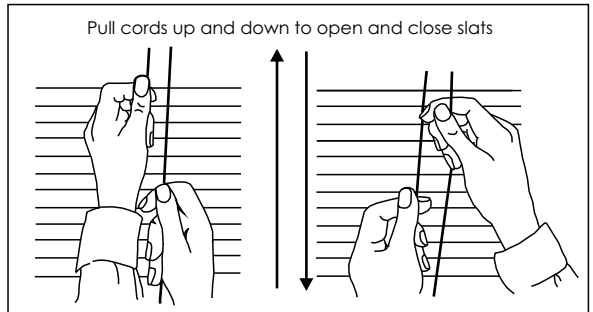

**Pull Cord:** Used to raise and lower the blind. To raise the blind.

Set the slats horizontally and draw the pull cord straight down until the blind is at the desired height, (see diagram below). When tension is released from the cord the automatic cord lock will hold the blind in the desired position.

To lower the blind, pull the cord towards the centre of the blind to release the cord lock, and let the cord glide through your hand.

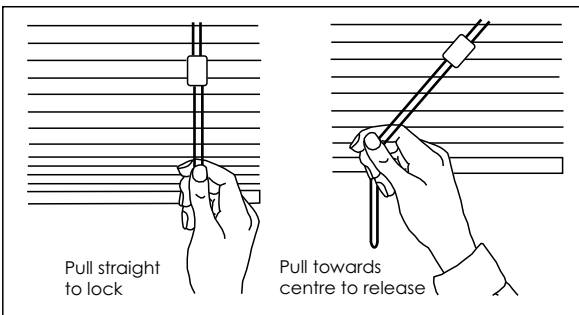

**WARNING**

Parents should realise that children could accidentally strangle in window blind cords. Keep cords out of the reach of children. Use these devices to make cords safe, available at local DIY stores or Curtain and Blind stores.

- A. Cleat
- B. Clamp or Clothes Peg
- C. Tie-Cord to Itself
- D. Tie-Down Device